

Error code and description

	Code indication		fault description
	Indoor displaying Panel code Indication	Outdoor (LED1 flash times)	
Indoor and Outdoor	E7	15	Communication fault between indoor and outdoor units
Indoor Malfunction	E1	...	Room temperature sensor failure
	E2	...	Heat-exchange sensor failure
	E4	...	Indoor EEPROM error
	E14	...	Indoor fan motor malfunction
Outdoor Malfunction	F12	1	Outdoor EEPROM error
	F1	2	The protection of IPM
	F22	3	Overcurrent protection of AC electricity for the outdoor model
	F3	4	Communication fault between the IPM and outdoor PCB
	F19	6	Power voltage is too high or low
	F4	8	Overheat protection for Discharge temperature
	F8	9	Outdoor DC fan motor fault
	F21	10	Defrost temperature sensor failure
	F7	11	Suction temperature sensor failure
	F6	12	Ambient temperature sensor failure
	F25	13	Discharge temperature sensor failure
	F11	18	Deviate from the normal for the compressor
	F28	19	Loop of the station detect error
	F2	24	Overcurrent of the compressor
	F23	25	Overcurrent protection for single-phase of the compressor
E9	21	High work-intense protection	

Download by <https://www.fully4world.com>